


Wiring Diagram Type 912

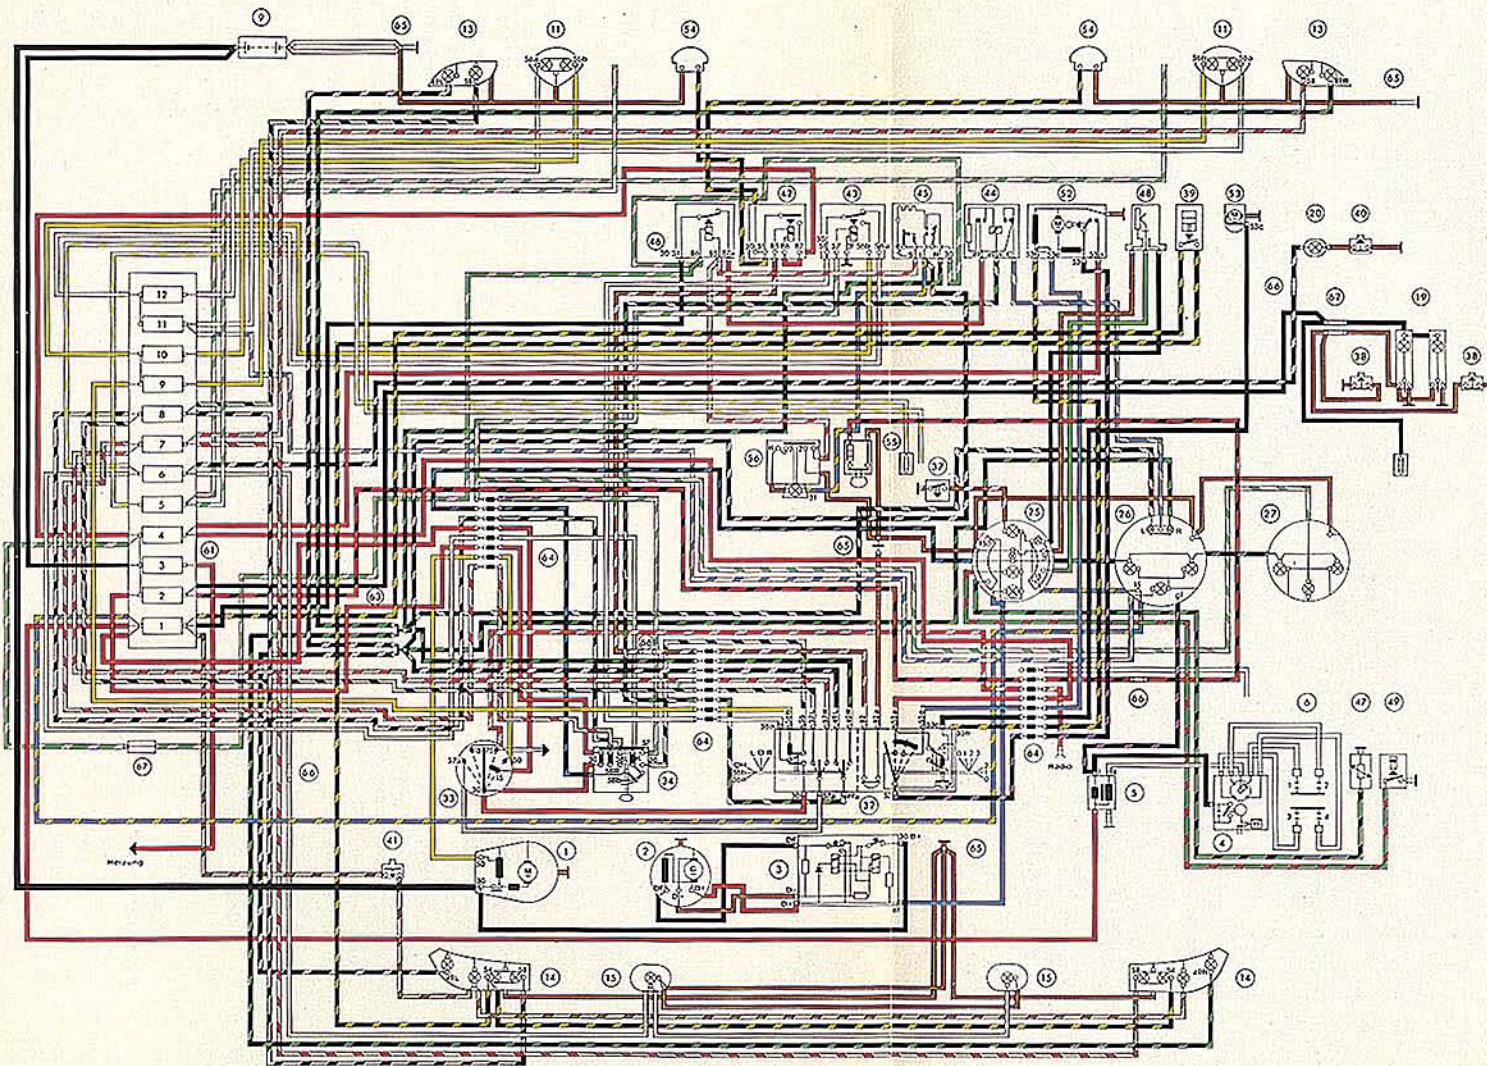

Wiring Diagram Type 912

- ① starter
- ② generator
- ③ regulator
- ④ distributor
- ⑤ ignition coil
- ⑥ spark plugs
- ⑦ battery
- ⑧ headlight
- ⑨ parking and turn signal light
- ⑩ tail, stop, turn signal and back-up light
- ⑪ license plate light
- ⑫ interior light
- ⑬ luggage compartment light
- ⑭ fuel gauge, oil temperature gauge
- ⑮ transistorized tachometer
- ⑯ speedometer
- ⑰ combined switch for turn signal, low beam, headlight signal, wiper, washer and horn button
- ⑱ starter/ignition switch
- ⑲ main light switch
- ⑳ handbrake control light switch
- ㉑ door contact switch
- ㉒ stop light switch
- ㉓ luggage compartment light switch
- ㉔ back-up light switch
- ㉕ horn relay
- ㉖ headlamp flasher relay
- ㉗ turn signal flasher
- ㉘ hazard light flasher
- ㉙ hazard light relay
- ㉚ oil temperature sending unit
- ㉛ fuel tank sending unit
- ㉜ oil pressure sending unit
- ㉝ wiper motor
- ㉞ washer pump
- ㉟ horn
- ⓫ cigarette lighter
- ⓬ hazard light switch
- ⓭ fuse box
- ⓮ two-pole plug connector
- ⓯ cable distribution block
- ⓰ eight-way disconnect
- ⓱ ground
- ⓲ single-pole plug connector
- ⓳ hazard light fuse with box

Fuses

- 1 stop, turn signal and back-up light
- 2 interior light, cigarette lighter
- 3 auxiliary heater (optional)
- 4 wiper and washer
- 5 fog lamps (optional)
- 6 license plate and luggage compartment light
- 7 parking light, right
- 8 parking light, left
- 9 low beam, right
- 10 low beam, left
- 11 high beam, right, indicator light
- 12 high beam, left